

## FAVORITES

### Create Favorite Lists

There are 12 pre-defined favorite name lists and you may create up to 5 additional Favorite Lists of your preference.

1. Press Menu. Arrow down to 'Settings' and arrow right to 'Edit Favorites'. Press OK.
2. 'Unnamed List' or 'New List' will appear. Arrow down to browse through all your channels. Using the Arrow buttons, move through the channels and press OK to add or remove them from your 'Favorite List'. You may also select a channel by using the number keys.
3. Press the Blue button. Now title your list. Click 'Submit' when done, then OK to exit notice. Press the blue button to save. Click OK. Select EXIT to finish.

### Using Favorite Lists

1. Press FAV. By default your list is 'All' channels.
2. Arrow up/down to choose a Favorite list. Press OK. With a 'Favorite List' selected, you will be in Favorites mode while using that list.
3. Use either the Channel Up/Down button, Arrow buttons or Number keys to navigate between channels. The Info Bar shows the the name of the active list. To select another channel in your list, just click FAV once again.
4. To leave a Favorite mode, press FAV. Arrow up/down to select 'All' and press OK.

## PARENTAL CONTROLS

There are several ways to use Parental Controls. From Main Menu, select 'My Settings'. Arrow to the right, highlight 'Parental' and press the OK button. You will now be in the Parental Control menu to:

### Change PIN:

Select the Change PIN category to enter your new PIN and confirm it. Until you change it the default PIN is 0000.

### Edit Locked Channels

You can lock entire channels via the Edit Locked category so that it requires a PIN to view programming. You may prevent locked channels from showing in the channel guide via the Parental Control Options (locked channels would still be accessible using the number keys and entering a PIN).

### Set Program Rating Limits

To control the types of programming that can be viewed, you may set program limits based on motion-picture ratings (G, PG, R, etc.) or TV ratings (TV-G, TV-14, etc.) using the Set Ratings category. If you attempt to tune to a channel that is airing a program with a rating at or above your rating limit, you must enter a PIN to view the program.

### Set Time Restrictions

The Time Restrictions category allows you to set time periods per day where television access requires a PIN. These time restrictions may be set by selecting the Green button to Add Restriction under the Time Restrictions category.

### Cancel Override

Cancel Override category allows any previous PIN overrides for an extended period of time to be cancelled. Once the override has been cancelled, the parental PIN will need to be used for all Locked and Rated channels.

## REMINDERS

Set Reminders: While viewing the guide, highlight the program where you want a reminder and press OK.



## HINTS

### Info Button

Press Info and you will see the name and a description of the current program on the screen.

### OK Button

Press OK to show the 'Now Playing' bar and you will see what program is currently playing and any programs currently being recorded, if applicable.

### Guide Button

The guide provides the most comprehensive view of current programming. Programs are organized by time and channel making it a user friendly experience.

### STB Button/TV Button

When controlling the Set Top Box, the STB Button on the remote should light up when you press buttons. If nothing is happening, press STB and then control the remote. The TV button is used to control the TV device only and will not control your Cobalt TV system.

### Input Button

If the input button at the bottom left of the remote gets pressed, it can change the input that the TV is set to and you will not be able to see your Cobalt TV. Press Input button repeatedly to get to the correct input.

# Remote Control Guide



BWTelcom.CobaltTV.com

BWTelcom • 607 Chief Street • Benkelman, NE  
308.423.2000

Provided by  Clearly Connected.

## Remote Set Up

### Pair the TV, DVD, VCR or Audio to the Remote

1. Manually turn ON the device you want to setup on the remote.
2. Press and hold <<SETUP>> until the mode key blinks twice.
3. Press and release the mode key for device you wish to set up. The mode key stays lit.
4. Find your device and brand from the charts below and note the DIGIT key assigned to your brand. Press and hold down the DIGIT key for your device/brand while pointing the remote at the device.
5. Let go of the key when your device turns OFF. Setup for that device is complete.

TV	
Digit	Brand
1	Insignia
2	LG
3	Panasonic
4	Philips Magnavox
5	Samsung
6	Sanyo
7	Sharp
8	Sony
9	Vizio
0	Westinghouse

DVD/VCR	
Digit	Brand
1	Insignia
2	LG
3	Panasonic
4	Philips Magnavox
5	RCA
6	Samsung
7	Sharp
8	Sony
9	Toshiba
0	Vizio

Audio	
Digit	Brand
1	Bose
2	Denon
3	LG
4	Onkyo
5	Panasonic
6	Philips
7	Pioneer
8	Samsung
9	Sony
0	Yamaha

### Searching for Your Code

If your device does not respond to the remote control after trying all of the codes listed for your brand, or if your brand is not listed, try searching for the code.

1. Turn on your TV.
2. On the remote control, press TV once; it will blink once. Then press and hold SETUP until the TV key blinks twice.
3. Enter 991. The TV key will blink twice. Aim the remote control at the TV and press POWER once.
4. Press and release the CH+ key continuously, then stop when the TV turns off.
5. Press POWER. The TV should turn on, then press SETUP once to lock in the code. The LED will blink twice. NOTE: If the TV does not turn on, then slowly press and release CH- to go back through the codes, then press SETUP when the TV turns on.

To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate key (e.g., VCR, DVD, AUD, or STB) for the device.

### Setting Up to Power On/Off both Set Top Box and the TV with one push of the POWER button

1. Press and hold SETUP until Set Top Box button on the remote flashes twice.
2. Enter 995, then press POWER once.
3. Press STB once, then TV once. (If you want to shut off AUD, DVD, VCR, then press those also.)
4. Then press and hold SETUP until it flashes twice. Press POWER and if the remote is programmed for the specific TV, the TV will shut off. Pressing POWER again will turn on the TV and the Set Top Box. The remote will control both the TV and the Set Top Box.

\*If your equipment is not listed, visit [CobaltTV.com](http://CobaltTV.com) for more options.

## Controlling the Remote

### TV, AUD, DVD, VCR, STB

Use one remote to control multiple devices.

### Setup

Use for programming sequences of devices controlled by the remote.

### Skip Forward, Skip Back, REW, PLAY, FFWD, STOP, Pause, Record

In STB mode, these control the DVR functions. In other modes, these can control a VCR, DVD Player or PVR.

### Menu

Displays the menu.

### Guide

Opens the Interactive Program Guide.

### Day +/-

Jump ahead or back one day in the Interactive Program Guide.

### Red, Green, Yellow, Blue

Access additional features on your set-top box.

### Vol +/-

Raise or lower the volume.

### Mute

Turn the sound off or on.

### Aspect Ratio\*

Temporarily change the conversion mode from Original Size or Fit to Screen.

### Input

In TV control mode, will change the input of the device you are controlling.

### Power

Turn on/off a selected device.

### Live

Return to watching live TV.

### List

Display a list of recorded, future and series rules on your DVR.

### Info

Display the current channel and program information. Press again for more detail.

### Browse, Search, Arrow and OK

Navigate and select onscreen choices.

### Exit

Exit the current screen.

### Page +/-

Page up or down in list and Interactive Program Guide.

### Channel +/-

Changes to the next higher or lower channel.

### On Demand

Access video on demand services.

### Last

Recall the last channel you were watching.

### FAV

View your favorite channels.

### Number Keys (0-9)

Directly select a channel or enter options.



\*If Available